


HTC Desire 626G dual sim


Inserting your nano SIM and microSD cards

IMPORTANT: USE A STANDARD NANO SIM ONLY.


Don't cut a micro SIM or regular SIM card and insert it into the nano SIM slot. It's thicker than the standard nano SIM card and may get stuck in the slot.

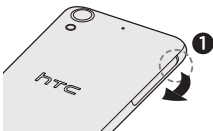


1. Make sure your phone is off and is facing **down**. Open the slot cover with your thumb or finger.

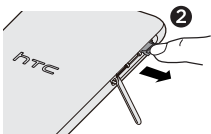

2. The two upper slots are nano SIM slots with trays. To remove the tray from each slot, insert your fingernail in the small groove in the tray and then pull the tray out.

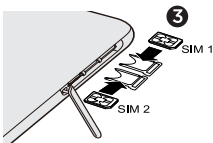


 3. Place your nano SIM cards into the trays with the gold contacts facing **up** and the cut-off corner facing **out**.




Note: You can insert a 3G nano SIM card in either slot. When you have two cards inserted, only one card can connect to the 3G network. The other card will connect to the 2G network only.

SIM 1 connects to the 3G network by default. You can also set which card connects to 3G. For details, see the user guide.

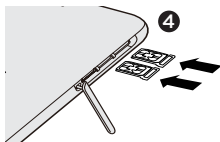

4. When reinserting the nano SIM trays, make sure they are facing **up** so that the nano SIM cards don't fall out. Slide the trays all the way into the slots.

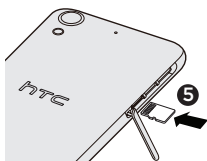

5. Insert your microSD™ card into the bottom slot, with the gold contacts facing **up** and towards the slot. Slide the card all the way in until it clicks into place.



6. To close the slot cover, slide the plastic hinge into the side and press the cover until it clicks into place.

Want some guidance on using your phone?

Go to www.htc.com/support/ to find the user guide, latest news, and more.

 
© 2015 HTC Corporation. All rights reserved.

HTC, the HTC logo, and HTC Desire are trademarks of HTC Corporation.

microSD is a trademark of SD-3C LLC.

All other company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners.

htc.com



91H0xxxx-xxM Rev.A